 

 
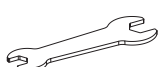










<p>A</p>  <p>M6x16 x4</p>	<p>B</p>  <p>M6x40 x4</p>	<p>C</p>  <p>M5x14 x3</p>	<p>D</p>  <p>x1</p>	<p>E</p>  <p>S=5mm x1</p>	<p>F</p>  <p>x2</p>	<p>G</p>  <p>x2</p>	<p>H</p>  <p>x1</p>	<p>1</p> 	<p>2</p> 	<p>3</p> 
---	---	---	---	--	---	---	---	---	---	---

1




D

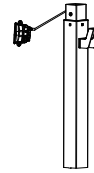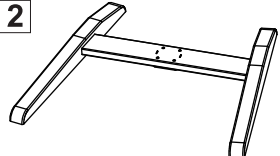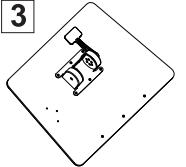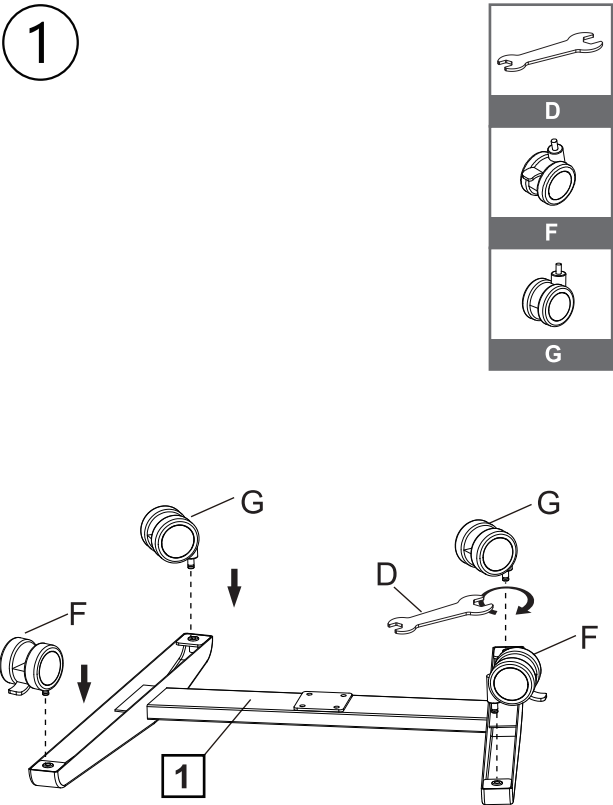F

G

2

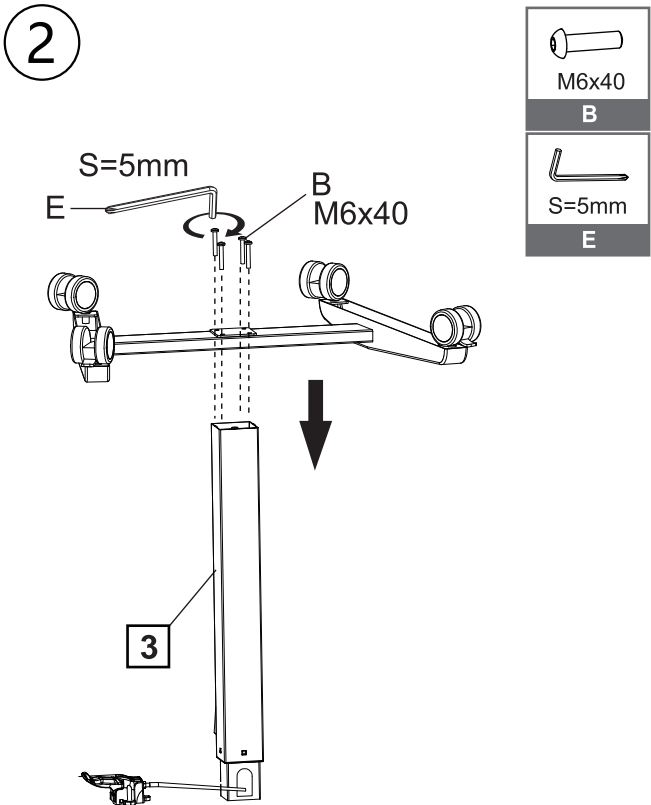

S=5mm


E

B M6x40

E

3

3

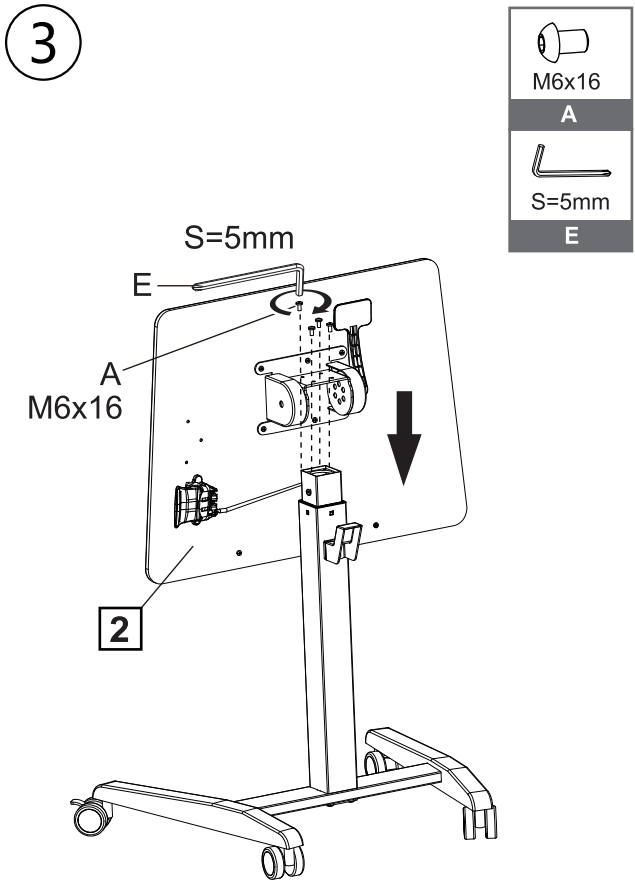

S=5mm


E

A M6x16


E

2

4

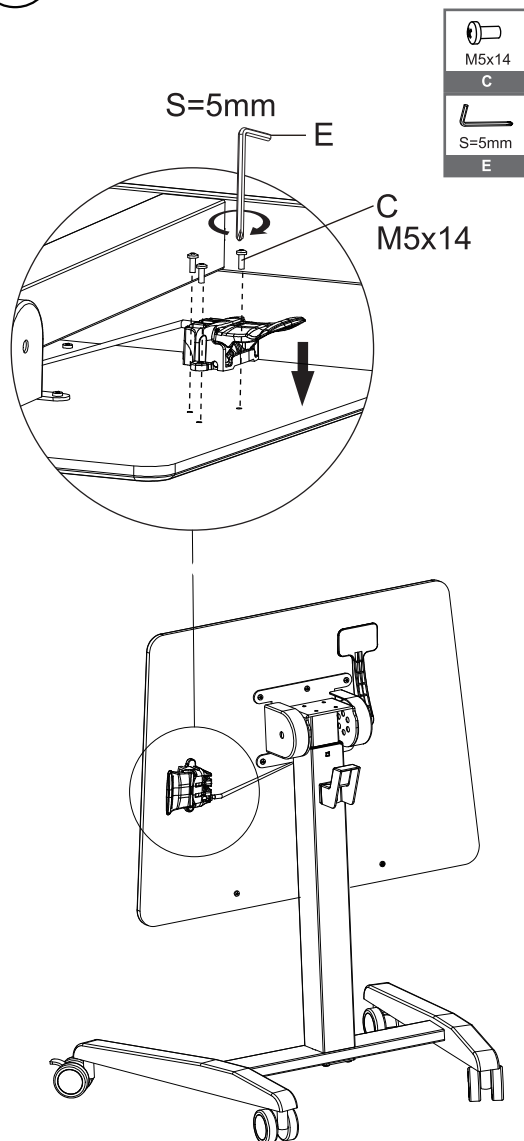


5

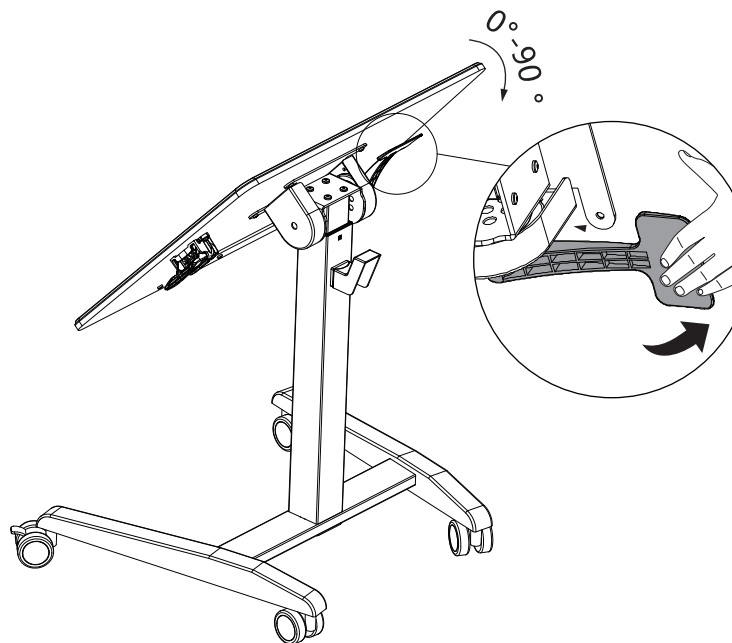

- PL Naciśnij uchwyt, aby obrócić pulpit stołu w zakresie 0°~90°.
- EN Press the handle to turn the table desktop from 0°~90°.
- DE Drücken Sie den Griff, um die Tischplatte von 0°~90° zu drehen.
- RU Нажмите на ручку, чтобы повернуть рабочий стол на угол 0°~90°.
- RO Apăsăți mânerul pentru a roti biroul de masă de la 0°~90°.
- LT Paspauskite rankenėlę, kad pasuktumėte stalo stalviršį 0°~90° kampui.
- CZ Stisknutím rukojeti otočíte stolní desku v rozsahu 0° ~ 90°.
- SK Stlačením rukoväte otočíte pracovnú plochu stola v rozsahu 0°~90°
- HU Nyomja meg a fogantyút az asztali felület elfordításához 0°~90° között.
- BG Натиснете дръжката, за да завъртите плота на масата от 0°~90°
- FR Appuyez sur la poignée pour faire pivoter le plateau de 0°~90°.
- IT Premere la maniglia per ruotare il tavolo da 0°~90°.
- ES Presione la manivela para girar el tablero de la mesa de 0°~90.

6

- PL Wciśnij i przytrzymaj przycisk przy podwyższeniu lub obniżeniu blatu.
- EN Press and hold the button while raising or lowering the tabletop.
- DE Halten Sie die Taste beim Anheben oder Absenken des Verdecks gedrückt.
- RU Нажмите и удерживайте кнопку при поднятии или опускании верхней части.
- RO Apăsăți și mențineți apăsat butonul atunci când ridicați sau coborâți partea superioară.
- LT Paspauskite ir palaikykite mygtuką, kai pakeliate arba nuleidžiate viršų.
- CZ Stiskněte a podržte tlačítko při zvedání nebo spouštění horní části.
- SK Pri zdvíhaní alebo spúšťaní hornej časti stlačte a podržte tlačidlo.
- HU Nyomja meg és tartsa lenyomva a gombot, amikor felemeli vagy leereszti a tetejét.
- BG Натиснете и задръжте бутона, когато повдигате или спускате горната част.
- FR Appuyez sur le bouton et maintenez-le enfoncé lorsque vous relevez ou abaissez le couvercle.
- IT Tenere premuto il pulsante quando si solleva o si abbassa la parte superiore del tavolo.
- ES Mantenga pulsado el botón cuando suba o baje la parte superior.

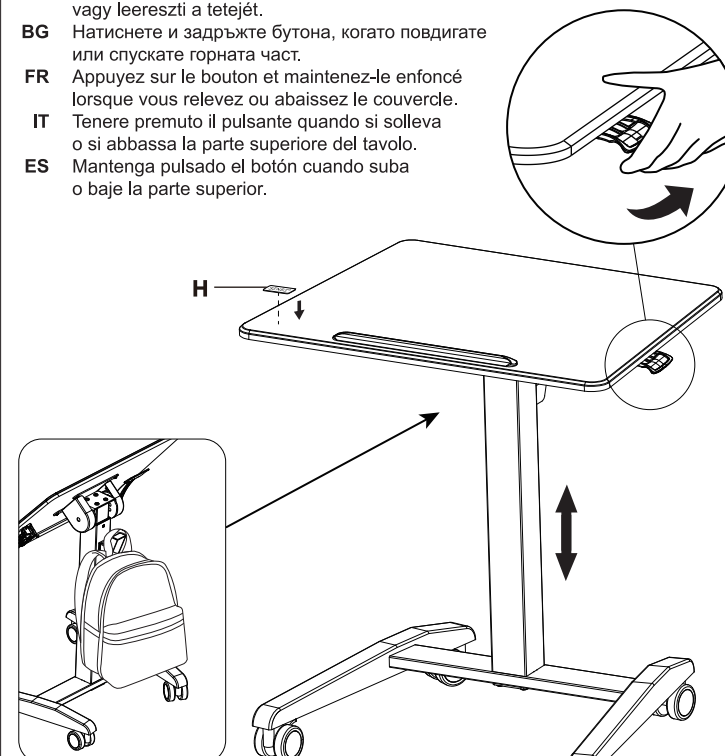

- PL Uchwyt na torbę
- EN Bag holder
- DE Taschenhalter
- RU держатель сумки
- RO Suport pentru geantă
- LT Krepšelio laikiklis
- CZ Držák na tašku
- SK Držiak na tašku
- HU Táskatartó
- BG Държач за чанти
- FR Porte-sac
- IT Portaborse
- ES Portabolsas